


172R-101098 REV.:12 | 2/24/22 REV. DESCRIPTION DATE BY

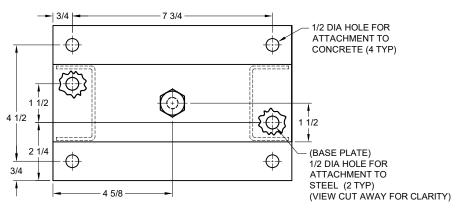

| MODEL M2SS-1C SEISMICALLY RESTRAINED VIBRATION ISOLATOR FOR 1" DEFLECTION |                     |                             |                         |               |
|---|---------------------|-----------------------------|-------------------------|---------------|
| SEISMIC MOUNT<br>SIZE   | RATED LOAD<br>(LBS) | RATED<br>DEFLECTION<br>(IN) | SPRING RATE<br>(LBS/IN) | COLOR CODE    |
| M2SS-1C-500   | 500                 | 0.83                        | 602                     | BLACK         |
| M2SS-1C-600   | 600                 | 0.75                        | 800                     | DK YELLOW     |
| M2SS-1C-740   | 740                 | 0.75                        | 987                     | YELLOW        |
| M2SS-1C-1040N   | 1040                | 0.75                        | 1386                    | YELLOW/ GREEN |

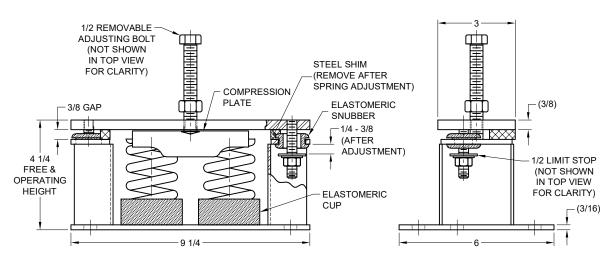

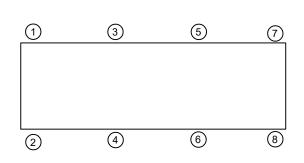

## **ISOLATOR SELECTIONS** LOC 1: LOC 2: LOC 3: LOC 4: OC 5: LOC 6: LOC 7: LOC 8: CUSTOMER EQP'T. TAG:

NOTE: MATERIAL SHOWN IS FOR (1) SET.

## NOTES:

- 1. ALL DIMENSIONS ARE IN INCHES, INTERPRET PER ANSI Y14.
- 2. STANDARD FINISH: HOUSING POWDER COAT (COLOR:BLACK), SPRING POWDER COAT (COLOR: SEE TABLE), HARDWARE ZINC-ELECTROPLATE.
- 3. EQUIPMENT MUST BE BOLTED OR WELDED TO THE TOP PLATE TO MEET ALLOWABLE SEISMIC RATINGS.
- 4. ISOLATOR BASE PLATE MUST BE ANCHORED TO CONCRETE WITH (4) 3/8 DIA ANCHORS.
- 5. ALL SPRINGS ARE DESIGNED FOR 50% OVERLOAD CAPACITY.

**CERTIFIED FOR:** 

6. REFER TO SHEET 2 OF 2 FOR INSTALLATION INSTRUCTIONS.

JOB NAME:

CUSTOMER:

**CUSTOMER P.O.:** 

SALES ORDER:

7. RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL, HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS.

MODEL M2SS-1C 500-1040 LBS. VIBRATION ISOLATOR WITH INTEGRAL SEISMIC RESTRAINT AND EXTERNAL ADJUSTMENT FOR 1 INCH DEFLECTION



**GROUP** 

THE POWER OF TOGETHER"

Bloomingdale, NJ 07403 Houston, TX 77041

| OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOF PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE. |        |   |  |
|--|--------|---|--|
| <b>7</b> 4   | SCALE: | _ |  |

REVISION

SHEET:

DRAWING NO.:

1 OF 2


| 72R-101098   REV.:12   2/24/22 | REV. | DESCRIPTION | DATE | BY |
|--------------------------------|------|-------------|------|----|
|                                |      |             |      | -  |

- 1. READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING INSTALL ATION
- 2. ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE POSITIONED IN ACCORDANCE WITH THE SUBMITTAL DRAWINGS OR AS OTHERWISE RECOMMENDED
- 3. SET ISOLATORS ON FLOOR, HOUSEKEEPING PAD, OR SUB-BASE, ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT MOUNTING HOLES. THE VMC GROUP RECOMMENDS THAT THE ISOLATOR BASE PLATES ("B") BE INSTALLED ON A LEVEL SURFACE. SHIM OR GROUT AS REQUIRED, LEVELING ALL ISOLATOR BASE PLATES AT THE SAME ELEVATION (1/4-INCH MAXIMUM DIFFERENCE CAN BE TOLERATED).
- 4. ANCHOR ALL ISOLATORS TO THE FLOOR, HOUSEKEEPING PAD, OR SUB-BASE USING THRU HOLES ("C") FOR CONCRETE OR ("D") FOR STEEL AS REQUIRED. USE ANCHORS MEETING THE DESIGN REQUIREMENTS SPECIFIED ON SHEET 1 OF 2. WELDING TO STEEL IS PERMITTED PROVIDING THE WELD ACHIEVES THE REQUIRED STRENGTH.
- 5. ISOLATORS ARE SHIPPED TO THE JOBSITE WITH (2) REMOVABLE SPACER SHIMS ("E") BETWEEN THE TOP PLATE AND THE HOUSING. THESE SHIMS **MUST** BE IN PLACE WHEN THE EQUIPMENT IS POSITIONED OVER THE ISOLATORS.
- 6. WITH ALL SHIMS ("E") IN PLACE, REMOVE ADJUSTING BOLT "G", AND SET ASIDE. KEEP THE NUT "H" SCREWED ONTO THE ADJUSTING BOLT. PLACE THE MACHINE OR EQUIPMENT ONTO TOP PLATE "A". ALIGNING THE EQUIPMENT MOUNTING HOLE WITH THE TAPPED HOLE IN THE TOP PLATE. REATTACH THE ADJUSTING BOLT BY BOLTING THROUGH THE EQUIPMENT MOUNTING HOLE INTO THE TAPPED HOLE OF THE (Cont.)

6. (Cont.)

ISOLATOR. TURN THE ADJUSTING BOLT UNTIL IT STARTS TO COMPRESS THE SPRING. LEAVE NUT "H" AT THE TOP OF THE ADJUSTING BOLT, LEAVING ROOM FOR ADJUSTING THE ISOLATOR PER STEP 9.

- 7. THE ADJUSTMENT PROCESS CAN ONLY BEGIN AFTER THE EQUIPMENT OR MACHINE IS AT ITS FULL OPERATING WEIGHT.
- 8. BACK OFF EACH OF THE (2) OR (4) LIMIT STOP LOCKNUTS ("F") PER ISOLATOR 1/4- TO 3/8-INCH.
- 9. ADJUST EACH ISOLATOR IN SEQUENCE BY TURNING ADJUSTING BOLT(S) "G" ONE FULL CLOCKWISE TURN AT A TIME. REPEAT THIS PROCEDURE ON ALL ISOLATORS. ONE AT A TIME. CHECK THE LIMIT STOP LOCKNUTS ("F") PERIODICALLY TO ENSURE THAT CLEARANCE BETWEEN THE WASHER AND RUBBER GROMMET IS MAINTAINED. STOP ADJUSTMENT OF AN ISOLATOR ONLY WHEN THE TOP PLATE ("A") HAS RISEN JUST ABOVE THE SHIM ("E").
- 10. REMOVE ALL SPACER SHIMS ("E").
- 11. FINE ADJUST ISOLATORS TO LEVEL EQUIPMENT.
- 12. ADJUST ALL LIMIT STOP LOCKNUTS ("F") PER ISOLATOR TO OBTAIN 3/8-INCH GAP. THE LIMIT STOP NUTS MUST BE KEPT AT THIS 3/8-INCH GAP TO ENSURE UNIFORM BOLT LOADING DURING UPLIFT (AS IN THE CASE WHEN A COOLING TOWER IS DRAINED).
- 13. INSTALLATION IS COMPLETE

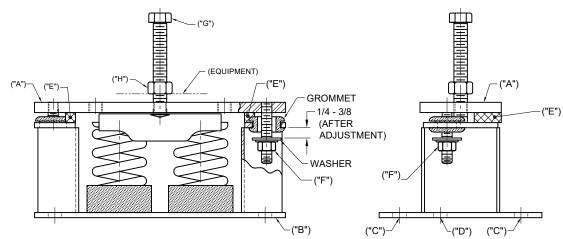

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE

|      | 1 |
|------|---|
|      |   |
|      | 4 |
|      |   |
| 而為於何 | İ |

JOB NAME: CUSTOMER:

CUSTOMER P.O.:

SALES ORDER

MODEL M2SS-1C 500-1040 LBS. VIBRATION ISOLATOR WITH INTEGRAL SEISMIC RESTRAINT AND EXTERNAL ADJUSTMENT **FOR 1 INCH DEFLECTION** 



**GROUP** 

THE POWER OF TOGETHER"

Bloomingdale, NJ 07403 Houston, TX 77041

|        | NONE |
|--------|------|
| SHEET: |      |

2 OF 2

DRAWING NO.:

REVISION