18 5/8

TYPE M2T-2R SPRING ISOLATORS WITH INTERNAL ADJUSTMENT						
AND ELASTOMERIC PAD-COVERED TOP PLATE						
MODEL	MAX LOAD	DEFLECTION	SPRING RATE	SPRING		
	(LBS)	(IN)	(LB/IN)	COLOR CODE		
M2T-3R-5O ²	8400	1.87	4484	BLACK		
M2T-3R-5N ^{1,2}	11200	1.66	6764	BLACK/BLACK		
M2T-2R-4O ³	12160	2.04	5962	LT IVORY		
M2T-2R-4N ^{1,3}	16700	2.04	8204	LT IVORY/LT IVORY		

DESCRIPTION

DATE

BY


NOTES:

REV.

STEEL SHIM (4 TYP) (REMOVE AFTER

SPRING ADJUSTMENT) (SHIM ON FAR SIDE NOT SHOWN FOR CLARITY)

- 1. TWO NESTED SPRINGS YIELD THIS LOAD. THE COLOR CODE IS FOR OUTER SPRING/ INNER SPRING.
- 2. THIS SPRING OR COMBINATION CAN BE USED FOR 1", 2" & 3" DEFLECTION.
- 3. THIS SPRING OR COMBINATION CAN BE USED FOR BOTH 1" & 2" DEFLECTION

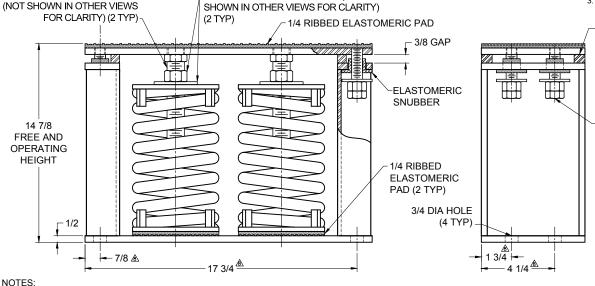

-ADJUSTING NUT AND WASHER (NOT

LIMIT-STOP (4 TYP) (3) (4) (6)

NOTES:

CERTIFIED FOR:

120R-101810 REV.: 6

REMOVABLE ADJUSTING BOLT

- 1. ALL DIMENSIONS ARE IN INCHES, INTERPRET PER ANSI Y14.
- 2. UNLESS OTHERWISE NOTED. DIMENSIONS FOR STYLE APPLY TO ALL OTHER STYLES.
- 3. FINISH: HOUSINGS- POWDER COAT, SPRINGS- POWDER COAT, HARDWARE- ZINC ELECTROPLATE.
- REFER TO SHEET 2 OF 2 FOR INSTALLATION INSTRUCTIONS.
- INNER SPRING (WHEN USED) NOT SHOWN.
- ALL SPRINGS ARE DESIGNED WITH 50% OVER TRAVEL.
- SPRING PACKAGE MAY BE REMOVED WITH SHIMS IN PLACE. CONTACT A FACTORY REPRESENTATIVE FOR SPRING REMOVAL INSTRUCTIONS
- /8\ DIMENSIONS APPLY TO BOTH TOP BOLT DOWN AND BASE PLATE ANCHORING HOLE.
- 9. RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL. HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS

ISOLATOR SELECTIONS			
LOC 1:	LOC 2:		
LOC 3:	LOC 4:		
_OC 5:	LOC 6:		
_OC 7:	LOC 8:		
CUSTOMER EQP'T. TAG:			

NOTE: MATERIAL SHOWN IS FOR (1) SET.

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE

JOB NAME:		
CUSTOMER:		
CUSTOMER P.O.:		
SALES ORDER:		

MODEL M2T-2R 8400-16700 LBS. SPRING ISOLATORS WITH INTERNAL ADJUSTMENT AND ELASTOMERIC PAD-COVERED TOP PLATE 2 INCH DEFLECTION



Bloomingdale, NJ 07403

Houston, TX 77041

NONE SHEET:

REVISION


WHO BY THE USE HEREOF ACKNOWLEDGE THE VMC GROUP'S OWNERSHIP AND AGREE TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.

120R-101810 REV.: 6 REV. DESCRIPTION DATE BY READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING. 1. LOCATE ISOLATORS UNDER EQUIPMENT AFTER DETERMINING

POSITIONS DESIGNATED IN THE VMC GROUP SUBMITTAL. SHEET 1. 2. ALL LIMIT BOLTS ARE FACTORY SET AND BONDED IN PLACE. THE SHIPPING NUT ON THE LIMIT BOLT MUST BE LOWERED UNTIL IT

TOUCHES THE BOLT HEAD. THE NUT WAS SHIPPED IN THE RAISED POSITION. DO NOT ATTEMPT TO READJUST THE LIMIT BOLTS. FACTORY SETTING ASSURES UNIFORM BOLT LOADING IF UPLIFT OCCURS, AS IN THE CASE OF A COOLING TOWER BEING DRAINED.

- THE VMC GROUP RECOMMENDS BOLTING ALL ISOLATORS TO A FLAT SURFACE. WHEN A WEIGHT CHANGE OCCURS IN EXCESS OF 20% OF EQUIPMENT OPERATING WEIGHT. THE ISOLATOR BASE PLATE **MUST** BE BOLTED. THE LOAD MUST BE CENTERED ON THE ISOLATOR TO AVOID ECCENTRIC LOADING OF TOP PLATE, WHICH WOULD TILT THE TOP PLATE OF THE ISOLATOR. THE TOP PLATE OF THE ISOLATOR MUST BE UNIFORMLY LOADED ACROSS ENTIRE LENGTH OF TOP PLATE OR THE EQUIPMENT MUST BE BLOCKED UNTIL LOAD IS TRANSFERRED TO THE ISOLATOR. THE VMC GROUP MUST BE ADVISED BEFORE THE ISOLATORS ARE RELEASED FOR PRODUCTION TO EVALUATE ANY VARIANCE TO THESE REQUIREMENTS.
- WHEN THE APPLICATION IS OUTDOORS AND THE EQUIPMENT WILL BE SUBJECT TO HIGH WINDS, THE OWNER'S REPRESENTATIVE MUST EVALUATE ANCHOR TYPE AND SIZE TO EFFECTIVELY RESIST WIND FORCES. TYPE M2T ISOLATORS ARE NOT SUITABLE FOR SEISMIC APPLICATIONS. USE VMC GROUP TYPES MS ISOLATORS TO ISOLATE EQUIPMENT THAT WILL BE SUBJECT TO SEISMIC FORCES.
- ISOLATORS ARE SHIPPED TO THE JOB SITE WITH SHIMS BETWEEN THE TOP PLATE AND HOUSING. THESE SHIMS MUST BE IN PLACE WHEN ISOLATOR IS POSITIONED UNDER EQUIPMENT.
- THE ADJUSTMENT PROCESS CAN ONLY BEGIN AFTER FULL OPERATING WEIGHT IS REACHED. THE ADJUSTMENTS CAN BE MADE BY STARTING AT ANY ISOLATOR AND TURNING THE ADJUSTING NUT CLOCKWISE TWO TURNS. PROCEED AROUND THE EQUIPMENT TO EACH ISOLATOR, ADJUSTING EACH TWO TURNS TO COMPRESS THE SPRINGS UNIFORMLY. CONTINUE THIS ADJUSTING PROCESS UNTIL ONE ISOLATOR JUST RISES OFF THE SHIMS. STOP ADJUSTMENT ON THAT AND OTHER ISOLATORS AS THEY RISE OFF THE SHIMS APPROXIMATELY 1/32". WHEN ALL ISOLATORS HAVE RISEN ABOVE THE SHIMS, THE ADJUSTMENT PROCESS IS COMPLETE. REMOVE ALL SHIMS.
- 7. FURTHER ATTENTION TO THE INSTALLATION IS NOT NORMALLY REQUIRED. THE VMC GROUP SUGGESTS A SEMIANNUAL INSPECTION OF THE COMPONENTS FOR POSSIBLE CORROSION PROBLEMS. IF PROBLEMS ARE OBSERVED, CONSULT THE VMC GROUP OR CORROSION CONTROL EXPERTS TO RECTIFY THE PROBLEM.
- 8. IF THE SPRING PACKAGE MUST BE REMOVED. CONTACT A FACTORY REPRESENTATIVE FOR DETAILED PROCEDURE.

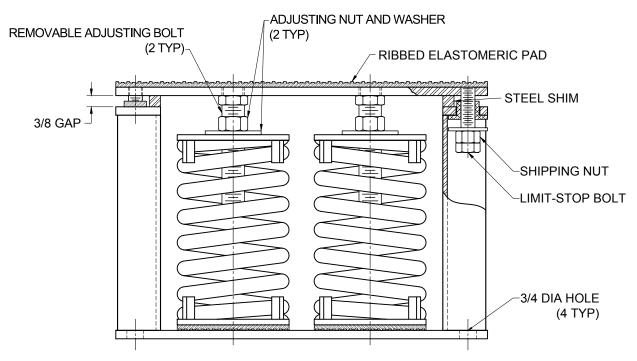

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE

CERTIFIED FOR:	MODEL M2T-2R 8400-16700 LBS.
JOB NAME:	SPRING ISOLATORS WITH
CUSTOMER:	INTERNAL ADJUSTMENT AND
CUSTOMER P.O.:	ELASTOMERIC PAD-COVERED TOP PLATE
SALES ORDER:	2 INCH DEFLECTION



NONE SHEET:

Bloomingdale, NJ 07403 Houston, TX 77041

REVISION