
120R-101748 REV.:9 4/6/22 REV. DESCRIPTION 8 15/16 - 4 3/16 - 5/8-11 UNC (5) 2 9/16 -TAPPED HOLE **--** 7/8 🕭

TYPE MH-1R SPRING ISOLATORS WITH INTERNAL ADJUSTMENT								
MODEL	MAX LOAD (LBS)	DEFLECTION (IN)	SPRING RATE (LB/IN)	SPRING COLOR CODE				
MH-3R-50 ²	2100	0.94	2242	BLACK				
MH-2R-40 ³	4300	1.44	2981	LT IVORY				
MH-1R-30	7100	1.66	4288	RED				
MH-1R-3N ¹	8500	1.41	6008	RED/RED				
MH-1R-2O	10500	1.07	9821	YELLOW				
MH-1R-2N ¹	14000	1.07	13135	YELLOW/YELLOW				

NOTES:


- 1. TWO NESTED SPRINGS YIELD THIS LOAD. THE COLOR CODE IS FOR OUTER SPRING/INNER SPRING.
- 2. THIS SPRING CAN BE USED FOR 1", 2" & 3" DEFLECTION.
- 3. THIS SPRING CAN BE USED FOR BOTH 1" & 2" DEFLECTION

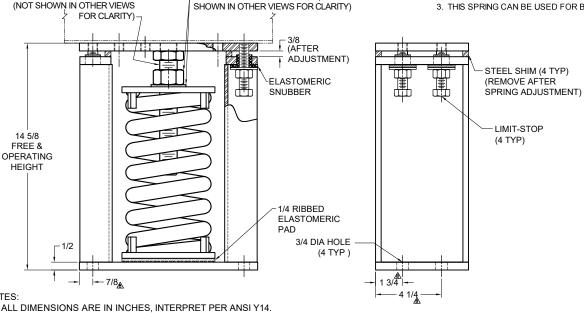

BOLT OR WELD EQUIPMENT SUPPORT BEAM TO MOUNT

ADJUSTING NUT AND WASHER (NOT

(BY OTHERS, NOT SHOWN IN OTHER VIEWS FOR CLARITY)

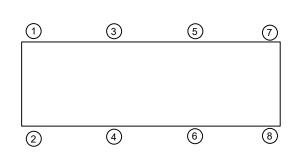

ISOLATOR SELECTIONS			
LOC 1:	LOC 2:		
LOC 3:	LOC 4:		
LOC 5:	LOC 6:		
LOC 7:	LOC 8:		
CUSTOMER EQP'T. TAG:			

NOTE: MATERIAL SHOWN IS FOR (1) SET.

- 1. ALL DIMENSIONS ARE IN INCHES, INTERPRET PER ANSI Y14.
- UNLESS OTHERWISE NOTED. DIMENSIONS FOR STYLE APPLY TO ALL OTHER STYLES.
- FINISH: HOUSINGS- POWDER COAT, SPRINGS- POWDER COAT, HARDWARE- ZINC ELECTROPLATE,
- REFER TO SHEET 2 OF 2 FOR INSTALLATION INSTRUCTIONS.

SALES ORDER:

INNER SPRING (WHEN USED) NOT SHOWN.

REMOVABLE ADJUSTING BOLT

- ALL SPRINGS ARE DESIGNED WITH 50% OVER TRAVEL.
- SPRING PACKAGE MAY BE REMOVED WITH SHIMS IN PLACE. CONTACT A FACTORY REPRESENTATIVE FOR SPRING REMOVAL INSTRUCTIONS.
- DIMENSIONS APPLY TO BOTH TOP BOLT DOWN AND BASE PLATE ANCHORING HOLE.
- RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL. HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS.

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.

NONE



CERTIFIED FOR: MODEL MH-1R 2100-14000 LBS. JOB NAME: SPRING ISOLATORS WITH CUSTOMER: INTERNAL ADJUSTMENT **CUSTOMER P.O.:** 1 INCH DEFLECTION



Bloomingdale, NJ 07403

Houston, TX 77041

SHEET: 1 OF 2 DRAWING NO.:

SCALE:


REVISION

DATE

120R-101748 REV.:9 4/6/22 REV. DESCRIPTION DATE BY

READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING.

- LOCATE ISOLATORS UNDER EQUIPMENT AFTER DETERMINING POSITIONS DESIGNATED IN THE VMC GROUP SUBMITTAL, SHEET 1.
- 2. ALL LIMIT BOLTS ARE FACTORY SET AND BONDED IN PLACE. THE SHIPPING NUT ON THE LIMIT BOLT MUST BE LOWERED UNTIL IT TOUCHES THE BOLT HEAD. THE NUT WAS SHIPPED IN THE RAISED POSITION. DO NOT ATTEMPT TO READJUST THE LIMIT BOLTS. FACTORY SETTING ASSURES UNIFORM BOLT LOADING IF UPLIFT OCCURS, AS IN THE CASE OF A COOLING TOWER BEING DRAINED.
- 3. THE VMC GROUP RECOMMENDS BOLTING ALL ISOLATORS TO A FLAT SURFACE. WHEN A WEIGHT CHANGE OCCURS IN EXCESS OF 20% OF EQUIPMENT OPERATING WEIGHT, THE ISOLATOR BASE PLATE **MUST** BE BOLTED. THE LOAD MUST BE CENTERED ON THE ISOLATOR TO AVOID ECCENTRIC LOADING OF TOP PLATE, WHICH WOULD TILT THE TOP PLATE OF THE ISOLATOR. THE TOP PLATE OF THE ISOLATOR MUST BE UNIFORMLY LOADED ACROSS ENTIRE LENGTH OF TOP PLATE OR THE EQUIPMENT MUST BE BLOCKED UNTIL LOAD IS TRANSFERRED TO THE ISOLATOR. THE VMC GROUP MUST BE ADVISED BEFORE THE ISOLATORS ARE RELEASED FOR PRODUCTION TO EVALUATE ANY VARIANCE TO THESE REQUIREMENTS.
- 4. WHEN THE APPLICATION IS OUTDOORS AND THE EQUIPMENT WILL BE SUBJECT TO HIGH WINDS, THE OWNER'S REPRESENTATIVE MUST EVALUATE ANCHOR TYPE AND SIZE TO EFFECTIVELY RESIST WIND FORCES. TYPE MH ISOLATORS ARE RESTRICTED TO LOW SEISMIC AND WIND APPLICATIONS, STEEL ATTACHMENT ONLY. USE VMC GROUP TYPE MS ISOLATORS TO ISOLATE EQUIPMENT THAT WILL BE SUBJECT TO SEISMIC AND WIND FORCES WITH CONCRETE ATTACHMENT.
- ISOLATORS ARE SHIPPED TO THE JOB SITE WITH SHIMS BETWEEN THE TOP PLATE AND HOUSING. THESE SHIMS MUST BE IN PLACE WHEN ISOLATOR IS POSITIONED UNDER EQUIPMENT.
- 6. THE ADJUSTMENT PROCESS CAN ONLY BEGIN AFTER FULL OPERATING WEIGHT IS REACHED. THE ADJUSTMENTS CAN BE MADE BY STARTING AT ANY ISOLATOR AND TURNING THE ADJUSTING NUT CLOCKWISE TWO TURNS. PROCEED AROUND THE EQUIPMENT TO EACH ISOLATOR ADJUSTING EACH TWO TURNS TO COMPRESS THE SPRINGS UNIFORMLY. CONTINUE THIS ADJUSTING PROCESS UNTIL ONE ISOLATOR JUST RISES OFF THE SHIMS. STOP ADJUSTMENT ON THAT AND OTHER ISOLATORS AS THEY RISE OFF SHIMS APPROXIMATELY 1/32". WHEN ALL ISOLATORS HAVE RISEN ABOVE THE SHIMS, THE ADJUSTMENT PROCESS IS COMPLETE. REMOVE ALL SHIMS
- 7. FURTHER ATTENTION TO THE INSTALLATION IS NOT NORMALLY REQUIRED. THE VMC GROUP SUGGESTS A SEMIANNUAL INSPECTION OF THE COMPONENTS FOR POSSIBLE CORROSION PROBLEMS. IF PROBLEMS ARE OBSERVED, CONSULT THE VMC GROUP OR CORROSION CONTROL EXPERTS TO RECTIFY THE PROBLEM.
- 8. IF THE SPRING PACKAGE MUST BE REMOVED, CONTACT A FACTORY REPRESENTATIVE FOR DETAILED PROCEDURE.

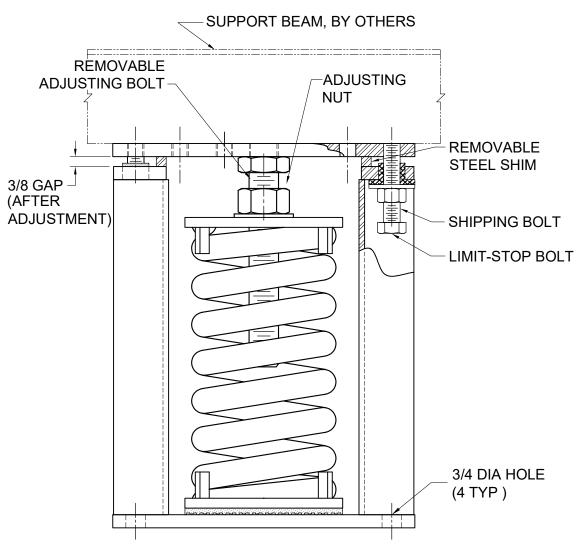

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.



CF	RT	IF	IFD	FO	R.
\sim \sim	1/1				'I 🔪 .

SALES ORDER:

JOB NAME: _____

CUSTOMER P.O.:

SPRING ISOLATORS WITH INTERNAL ADJUSTMENT 1 INCH DEFLECTION

MODEL MH-1R 2100-14000 LBS.



GROUP
THE POWER OF TOGETHER

THE POWER OF TOGETHER*
Bloomingdale, NJ 07403
Houston, TX 77041

SCALE : NONE	Memt	
^{SHEET:} 2 OF 2	··· ··V IS	CMf
DRAWING NO.:		REVISIO

PROPRIETARY: EXCEPT AS OTHERWISE AGREED IN WRITING, THE INFORMATION AND DESIGN DISCLOSED HEREIN ARE THE PROPERTY OF THE VMC GROUP AND MUST NOT BE COPIED OR DISTRIBUTED OUTSIDE THE VMC GROUP EXCEPT TO AUTHORIZED PERSONS WITH A GENUINE NEED TO KNOW WHO BY THE USE HEREOF ACKNOWLEDGE THE VMC GROUP'S OWNERSHIP AND AGREE TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.