

DESCRIPTION 172R-101104 REV.:12 2/23/22 REV. DATE 3/4 DIA HOLE FOR ATTACHMENT TO CONCRETE (4 TYP)

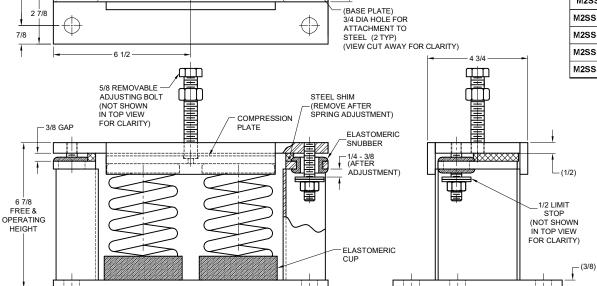

MODEL M2SS-2D SEISMICALLY RESTRAINED VIBRATION ISOLATOR FOR 2" DEFLECTION							
SEISMIC MOUNT SIZE	RATED LOAD (LBS)	RATED DEFLECTION (IN)	SPRING RATE (LBS/IN)	COLOR CODE			
M2SS-2D-870	870	1.89	460	RED			
M2SS-2D-1200N	1200	1.88	638	RED/ BLACK			
M2SS-2D-1450	1450	1.63	890	TAN			
M2SS-2D-1690	1690	1.58	1070	PINK			
M2SS-2D-2000N	2000	1.60	1250	PINK/ BLACK			
M2SS-2D-2640N	2640	1.51	1748	PINK/ GRAY			
M2SS-2D-2870N	2870	1.51	1901	PINK/ GRAY/ ORANGE			
M2SS-2D-3280N	3280	1.62	2025	PINK/ GRAY/ DK BROWN			

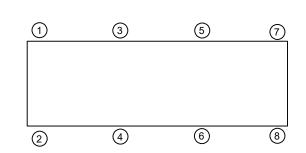

2 1/4 6 1/4

- 1. ALL DIMENSIONS ARE IN INCHES, INTERPRET PER ANSI Y14.
- 2. STANDARD FINISH: HOUSING POWDER COAT (COLOR:BLACK), SPRING POWDER COAT (COLOR: SEE TABLE), HARDWARE ZINC-ELECTROPLATE.
- 3. EQUIPMENT MUST BE BOLTED OR WELDED TO THE TOP PLATE TO MEET ALLOWABLE SEISMIC RATINGS.
- 4. ISOLATOR BASE PLATE MUST BE ANCHORED TO CONCRETE WITH (4) 13/16 DIA ANCHORS.
- 5. ALL SPRINGS ARE DESIGNED FOR 50% OVERLOAD CAPACITY.

SALES ORDER:

- 6. REFER TO SHEET 2 OF 2 FOR INSTALLATION INSTRUCTIONS.
- 7. RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL. HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS.

ISOLATOR SELECTIONS				
LOC 1:	LOC 2:			
LOC 3:	LOC 4:			
LOC 5:	LOC 6:			
LOC 7:	LOC 8:			
CUSTOMER EQP'T. TAG:				

NOTE: MATERIAL SHOWN IS FOR (1) SET.

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.

CERTIFIED FOR: JOB NAME: CUSTOMER: CUSTOMER P.O.:

MODEL M2SS-2D 870-3280 LBS. VIBRATION ISOLATOR WITH INTEGRAL SEISMIC RESTRAINT AND EXTERNAL ADJUSTMENT 2 INCH DEFLECTION



THE POWER OF TOGETHER"

Bloomingdale, NJ 07403 Houston, TX 77041

2 GODGITTOTED TO THE T DEGOMETATALE DEE.					
CALE:					
NONE	Member				
SHEET:	'.'' -V 5 (CMA			
1 OF 2					
RAWING NO.:		REVISIO			

BY

PROPRIETARY: EXCEPT AS OTHERWISE AGREED IN WRITING, THE INFORMATION AND DESIGN DISCLOSED HEREIN ARE THE PROPERTY OF THE VMC GROUP AND MUST NOT BE COPIED OR DISTRIBUTED OUTSIDE THE VMC GROUP EXCEPT TO AUTHORIZED PERSONS WITH A GENUINE NEED TO KNOW WHO BY THE USE HEREOF ACKNOWLEDGE THE VMC GROUP'S OWNERSHIP AND AGREE TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.


172R-101104 REV.: 12 2/23/22 REV. DESCRIPTION DATE BY

- 1. READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING INSTALLATION.
- 2. ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE POSITIONED IN ACCORDANCE WITH THE SUBMITTAL DRAWINGS OR AS OTHERWISE RECOMMENDED.
- 3. SET ISOLATORS ON FLOOR, HOUSEKEEPING PAD, OR SUB-BASE, ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT MOUNTING HOLES. THE VMC GROUP RECOMMENDS THAT THE ISOLATOR BASE PLATES ("B") BE INSTALLED ON A LEVEL SURFACE. SHIM OR GROUT AS REQUIRED, LEVELING ALL ISOLATOR BASE PLATES AT THE SAME ELEVATION (1/4-INCH MAXIMUM DIFFERENCE CAN BE TOLERATED).
- 4. ANCHOR ALL ISOLATORS TO THE FLOOR, HOUSEKEEPING PAD, OR SUB-BASE USING THRU HOLES ("C") FOR CONCRETE OR ("D") FOR STEEL AS REQUIRED. USE ANCHORS MEETING THE DESIGN REQUIREMENTS SPECIFIED ON SHEET 1 OF 2. WELDING TO STEEL IS PERMITTED PROVIDING THE WELD ACHIEVES THE REQUIRED STRENGTH
- 5. ISOLATORS ARE SHIPPED TO THE JOBSITE WITH (2) REMOVABLE SPACER SHIMS ("E") BETWEEN THE TOP PLATE AND THE HOUSING. THESE SHIMS MUST BE IN PLACE WHEN THE EQUIPMENT IS POSITIONED OVER THE ISOLATORS.
- 6. WITH ALL SHIMS ("E") IN PLACE. REMOVE ADJUSTING BOLT "G". AND SET ASIDE. KEEP THE NUT "H" SCREWED ONTO THE ADJUSTING BOLT. PLACE THE MACHINE OR EQUIPMENT ONTO TOP PLATE "A". ALIGNING THE EQUIPMENT MOUNTING HOLE WITH THE TAPPED HOLE IN THE TOP PLATE. REATTACH THE ADJUSTING BOLT BY BOLTING THROUGH THE EQUIPMENT MOUNTING HOLE INTO THE TAPPED HOLE OF THE (Cont.)

6. (Cont.)

ISOLATOR. TURN THE ADJUSTING BOLT UNTIL IT STARTS TO COMPRESS THE SPRING. LEAVE NUT "H" AT THE TOP OF THE ADJUSTING BOLT. LEAVING ROOM FOR ADJUSTING THE ISOLATOR PER STEP 9.

- 7. THE ADJUSTMENT PROCESS CAN ONLY BEGIN AFTER THE EQUIPMENT OR MACHINE IS AT ITS FULL OPERATING WEIGHT.
- 8. BACK OFF EACH OF THE (2) OR (4) LIMIT STOP LOCKNUTS ("F") PER ISOLATOR 1/4- TO 3/8-INCH.
- 9. ADJUST EACH ISOLATOR IN SEQUENCE BY TURNING ADJUSTING BOLT(S) "G" ONE FULL CLOCKWISE TURN AT A TIME. REPEAT THIS PROCEDURE ON ALL ISOLATORS, ONE AT A TIME. CHECK THE LIMIT STOP LOCKNUTS ("F") PERIODICALLY TO ENSURE THAT CLEARANCE BETWEEN THE WASHER AND RUBBER GROMMET IS MAINTAINED. STOP ADJUSTMENT OF AN ISOLATOR ONLY WHEN THE TOP PLATE ("A") HAS RISEN JUST ABOVE THE SHIM ("E").
- 10. REMOVE ALL SPACER SHIMS ("E").
- 11. FINE ADJUST ISOLATORS TO LEVEL EQUIPMENT.
- 12. ADJUST ALL LIMIT STOP LOCKNUTS ("F") PER ISOLATOR TO OBTAIN 3/8-INCH GAP. THE LIMIT STOP NUTS MUST BE KEPT AT THIS 3/8-INCH GAP TO ENSURE UNIFORM BOLT LOADING DURING UPLIFT (AS IN THE CASE WHEN A COOLING TOWER IS DRAINED).
- 13. INSTALLATION IS COMPLETE.

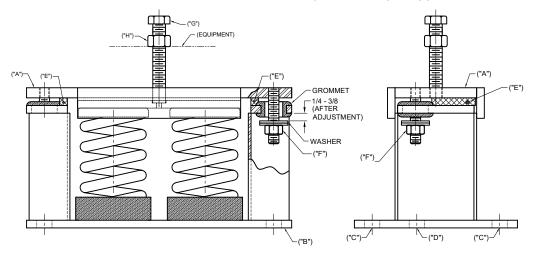

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.

CERTIFIED FOR: JOB NAME:

CUSTOMER P.O.:

SALES ORDER

MODEL M2SS-2D 870-3280 LBS. VIBRATION ISOLATOR WITH INTEGRAL SEISMIC RESTRAINT AND EXTERNAL ADJUSTMENT 2 INCH DEFLECTION



THE POWER OF TOGETHER

Bloomingdale, NJ 07403 Houston, TX 77041

NONE	Member
SHEET:	···· ·VISCM
2 OF 2	
DRAWING NO.:	REV

ISION