


REV.	DESCRIPTION	DATE	BY

MODELS AW & AWH-3D SPRING-FLEX ISOLATORS				
MODEL	MAX LOAD <sup>2</sup> (LBS)	DEFLECTION (IN)	SPRING RATE (LB/IN)	SPRING COLOR CODE
AW*-3D-800 <sup>1</sup>	800	3.00	267	DK GRAY
AW*-3D-1225 <sup>1</sup>	1225	2.94	417	RED
AW*-3D-1510 <sup>1</sup>	1510	2.52	600	MED GRAY
AW*-3D-2035 <sup>1</sup>	2035	2.54	800	DK YELLOW

## NOTES:

- 1. TO COMPLETE MODEL NUMBER, ADD STYLE LETTER (IF USED) IN PLACE OF \*.
- 2. LOAD WILL BE LABELED ON ISOLATOR AND STENCILED ON BASE PLATE.

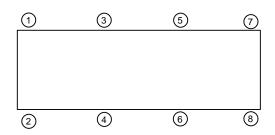

ISOLATOR SELECTIONS			
LOC 1:	LOC 2:		
LOC 3:	LOC 4:		
LOC 5:	LOC 6:		
LOC 7:	LOC 8:		
CUSTOMER EQP'T. TAG:	•		

NOTE: MATERIAL SHOWN IS FOR (1) SET.


6. RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL.HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS.


OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIO	R
PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.	

CERTIFIED FOR:			SCALE: NONE	a	
JOB NAME:	MODEL AW AND AWH-3D 800-2035 LBS.		SHEET:	M e m £ ''.'' <del>- V S</del>	
CUSTOMER :	OPEN SPRING- FLEX ISOLATORS	VMC			
CUSTOMER P.O.:	3 INCH DEFLECTION	GROUP THE POWER OF TOGETHER*	DRAWING NO.:		REVISION
SALES ORDER:		Bloomingdale, NJ 07403 Houston, TX 77041			

## INSTALLATION INSTRUCTION

- ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE SPACED AND ARRANGED IN ACCORDANCE WITH INSTALLATION DRAWINGS OR AS OTHERWISE RECOMMENDED.
- 2. SET ISOLATORS ON FLOOR OR SUB-BASE, ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT MOUNTING HOLES OR SPACE AND ARRANGE ISOLATORS IN ACCORDANCE WITH THE INSTALLATION DRAWING. SHIM OR GROUT AS REQUIRED LEVELING ALL ISOLATOR BASE PLATES AT THE SAME ELEVATION (1/4" MAXIMUM DIFFERENCE IN ELEVATION CAN BE TOLERATED). ISOLATOR BASE MUST REST ON A FLAT SURFACE.
- 3. DESIGNATION OF ISOLATORS IS SHOWN ON TAG / LABEL ATTACHED TO EACH ISOLATOR OR ISOLATORS MAY BE IDENTIFIED BY SIZE OF BASE PLATE AND / OR SPRING COLOR CODE.
- 4. IF FLOOR FASTENING IS REQUIRED, PLACE MOUNT AS INDICATED ON NOTE 1 THRU 3 AND ANCHOR USING (2) ANCHOR THRU HOLES "I" ON STEEL PLATE "G" (APPLIES ONLY TO STYLE AWH MOUNT).
- 5. REMOVE JAM NUT "B" FROM ADJUSTING BOLT "A", TURN ADJUSTING NUT "D" COUNTER-CLOCKWISE TO SET "H" FOR ALL ISOLATORS.
- 6. POSITION EQUIPMENT OVER THE ISOLATORS, ALIGN MOUNT ADJUSTING BOLT "A" TO EQUIPMENT BASE MOUNTING THRU HOLES.
- 7. LOWER EQUIPMENT UNTIL IT REST ON ADJUSTING NUT WASHER "C" (SPRING WILL COMPRESS)
- 8. INSERT JAM NUT "B" ON ADJUSTING BOLT "A".
- 9. LEVEL EQUIPMENT BY TURNING ADJUSTING NUT "D" AS REQUIRED
- 10. TIGHTEN JAM NUT "B". INSTALLATION IS COMPLETE

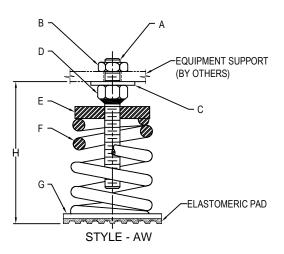

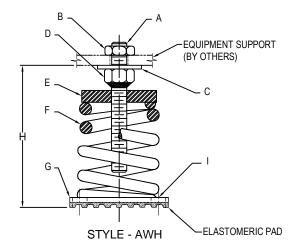

CERTIFIED FOR:		
JOB NAME:		
CUSTOMER :		
CUSTOMER P.O.:		
SALES ORDER:		

MODEL AW AND AWH-3D 800-2035 LBS.
OPEN SPRING- FLEX ISOLATORS
3 INCH DEFLECTION

VMC
GROUP
THE POWER OF TOGETHER"
Bloomingdale, NJ 07403

SCALE: NONE	Memi	
SHEET:	···· <del>VISCM</del>	
DRAWING NO.:		REVISION