
176R-101647 REV.:8 7/14/25 DESCRIPTION REV. DATE

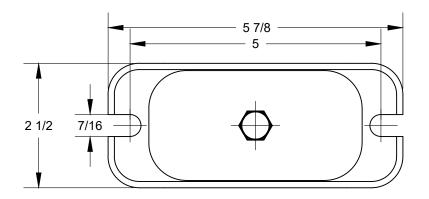

MODEL BE-1C SPRING-FLEX ISOLATOR WITH EXTERNAL ADJUSTMENT				
MODEL	MAX LOAD (LBS)	DEFLECTION (IN)	SPRING RATE (LB/IN)	SPRING COLOR CODE
BE-1C-50	50	1.00	50	BLUE
BE-1C-100	100	1.00	100	TAN
BE-1C-150	150	1.00	150	RED
BE-1C-250	250	0.83	300	BLACK
BE-1C-300	300	0.75	400	DK YELLOW
BE-1C-370	370	0.75	493	YELLOW
BE-1C-520N ¹	520	0.75	693	YELLOW/GREEN
NOTES:				

1. TWO NESTED SPRINGS YIELD THIS LOAD. THE COLOR CODE IS FOR OUTER SPRING/ INNER SPRING. 4 1/4 3/8 DIA ADJUSTING AND LOCKDOWN -LEVELING BOLT NUT ─ 1/4 TO 1/2 GAP 3 3/8 FREE **ELASTOMERIC** HEIGHT **SNUBBER** 1/2 0.2500 ELASTOMERIC PAD -

1	3	(5)	7
(2)	(4)	6	8

ISOLATOR SELECTIONS				
LOC 1:	LOC 2:			
LOC 3:	LOC 4:			
LOC 5:	LOC 6:			
LOC 7:	LOC 8:			
CUSTOMER EQP'T. TAG:				

NOTE: MATERIAL SHOWN IS FOR (1) SET.

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.



SALES ORDER:

CERTIFIED FOR: CERT MODEL BE-1C 50-520 LBS. HOUSED CAST IRON SPRING-FLEX JOB NAME: ISOLATORS SNUBBED WITH CUSTOMER: __ **EXTERNAL ADJUSTMENT** CUSTOMER P.O.: 1 INCH DEFLECTION


Bloomingdale, NJ Houston, TX Corona, CA Wind Gap, PA DRAWING NO.:

NONE 1 OF 2

INSTALLATION INSTRUCTION

- 1. ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE SPACED AND ARRANGED IN ACCORDANCE WITH INSTALLATION DRAWINGS OR AS OTHERWISE RECOMMENDED.
- 2. SET ISOLATORS ON FLOOR OR SUB-BASE, ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT ISOLATOR HOLES. SHIM OR GROUT AS REQUIRED LEVELING ALL ISOLATOR BASE PLATES "E" AT THE SAME ELEVATION (1/4" MAXIMUM DIFFERENCE IN ELEVATION CAN BE TOLERATED). ISOLATOR BASE PLATES MUST REST ON A FLAT SURFACE.
- 3. UNLESS SPECIFIED, ISOLATORS NEED NOT BE FASTENED TO FLOOR IN ANY WAY. IF REQUIRED, BOLT ISOLATORS TO FLOOR THROUGH SLOTS "D". RECOMMENDED MAXIMUM TORQUING OF ISOLATOR BASE ANCHORS TO 5 FT-# AFTER EQUIPMENT IS INSTALLED.
- 4. REMOVE ADJUSTING BOLT "C" WITH NUT "B" FROM TOP HOUSING "A". (DO NOT DISCARD.)
- 5. PLACE MACHINE OR EQUIPMENT ONTO TOP PLATE "A" OF ISOLATOR. THE WEIGHT OF THE MACHINE WILL CAUSE THE UPPER HOUSING OF THE ISOLATOR TO GO DOWN. POSSIBLY RESTING ON THE LOWER HOUSING.
- 6. ALIGN EQUIPMENT ISOLATORS HOLE TO TOP HOUSING TAPPED HOLE.
- 7. TURN NUTS "B" UP ON LEVELING BOLTS SO THAT THEY WILL NOT INTERFERE WITH THE LEVELING PROCEDURE. INSERT BOLTS "C" THROUGH THE HOLES IN MACHINE BASE AND SCREW INTO THE TAPPED HOLE IN THE UPPER HOUSING OF THE ISOLATORS BY HAND AS FAR AS THEY WILL GO.
- 8. ADJUST EACH ISOLATOR IN SEQUENCE; SCREW DOWN ONE COMPLETE TURN ON THE ADJUSTING BOLT OF EACH ISOLATORS, ADJUST UNTIL 1/4" GAP IS OBTAINED ON ALL
- 9. TURN NUT ON ADJUSTING BOLT "C" DOWN AGAINST MACHINE LEG AND LOCK IN PLACE WITH WRENCH TO COMPLETE ADJUSTMENTS.
- 10. INSTALLATION IS COMPLETE.

SALES ORDER:

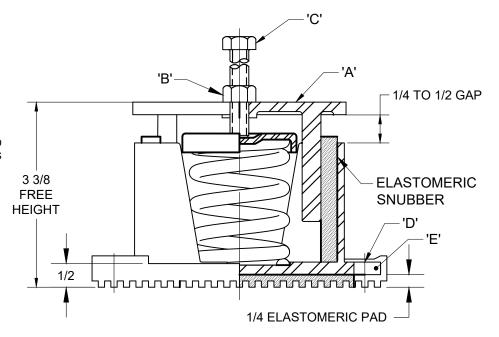

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.



CERTIFIED FOR: CERT	MODEL BE-1C 50-520 LBS.
JOB NAME:	— HOUSED CAST IRON SPRING-FLEX
CUSTOMER :	ISOLATORS SNUBBED WITH
CUSTOMER P.O.:	EXTERNAL ADJUSTMENT
041 50 00050	1 INCH DEFLECTION

				OUP IT SOLUTIONS*
Bloomingd	ale, NJ	Houston, TX	Corona, CA	Wind Gap, PA

DRAWING NO.: NONE

REVISION 2 OF 2